DYNEX™

26"/32" LCD TV / DVD combo

QUICK SETUP GUIDE

DX-26LD150A11/DX-32LD150A11

Remote control and 2 AAA batteries

AC power cord

L/R Audio cable

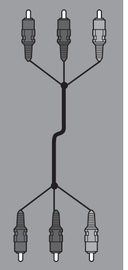

Component video cable

DX-26LD150A11

TV stand column

9 M4 screws with washers

TV stand

DX-32LD150A11

TV stand column

12 M4 screws with washers

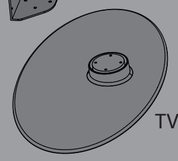

TV stand

2 M3 screws

TV stand cover

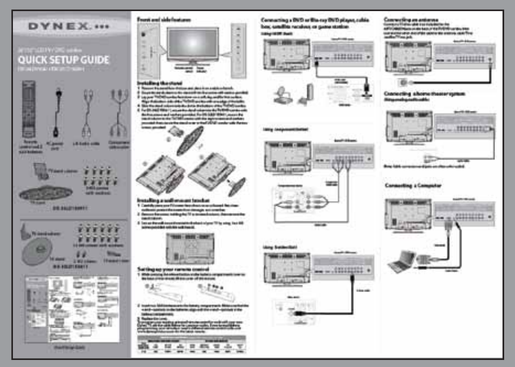

Quick Setup Guide

Front and side features

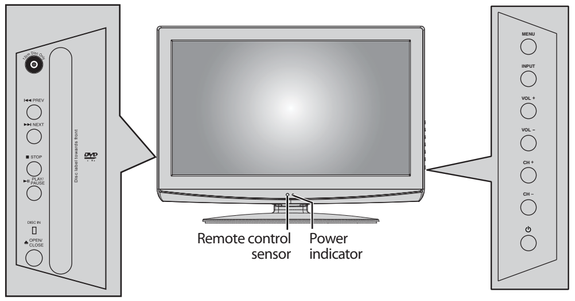

Installing the stand

1. Remove the stand from the box and place it on a table or bench.
2. Secure the stand column to the stand with the four screws with washers provided.
3. Lay your TV/DVD combo face down on a soft, dry, and lint free surface. Align the bottom side of the TV/DVD combo with one edge of the table.
4. Slide the stand column into the slot in the bottom of the TV/DVD combo.
5. For DX-26LD150A11, secure the stand column to the TV/DVD combo with the five screws and washers provided. For DX-32LD150A11, secure the stand column to the TV/DVD combo with the eight screws and washers provided, then secure the stand cover to the TV/DVD combo with the two screws provided.

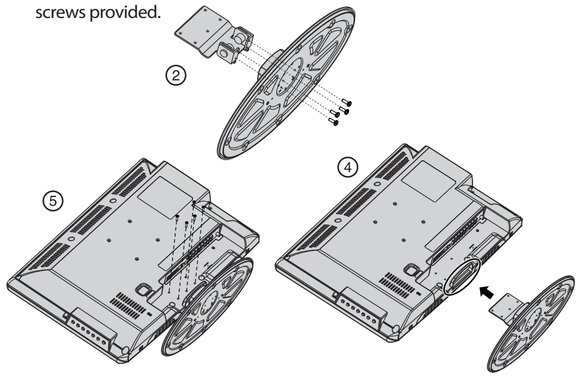

Installing a wall-mount bracket

1. Carefully place your TV screen face-down on a cushioned flat, clean surface to protect the screen from damages and scratches.
2. Remove the screws holding the TV to its stand column, then remove the stand column.
3. Secure the wall-mount bracket to the back of your TV by using the screws provided with the wall mount.

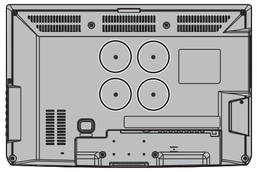

Setting up your remote control

1. While pressing the release button on the battery compartment cover on the back of the remote, lift the cover off the remote.

2. Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries align with the + and – symbols in the battery compartment.
3. Replace the cover.

To program your existing universal remote control to work with your new Dynex TV, see the table below for common codes. If you have problems programming your remote or need a different remote control code, visit www.dynexproducts.com for the latest remote .

Universal remote control TV codes (for all Dynex TVs manufactured after Jan. 1, 2007)								
Universal remote control makers and models				**Set-top box makers and models**				
Philips PHDVD5, PHSDSS, PMDVR8, PDVR8	RCA RCU807	One for All URC-6690	Sony RM-VL600	Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	TIVO Series 3, HD	DirectTV RC23
115	**135**	**0464**	**8043**	**0463**	**720**	**0463**	**0091**	**10463**

Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game station

Using HDMI (best)

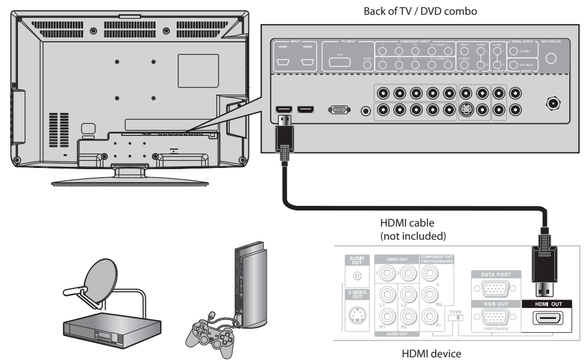

Using component (better)

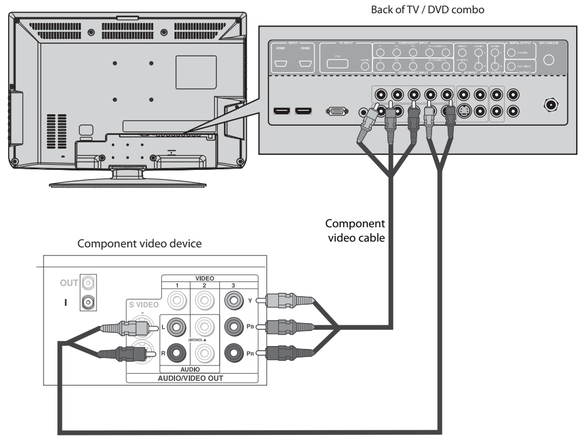

Using S-video (fair)

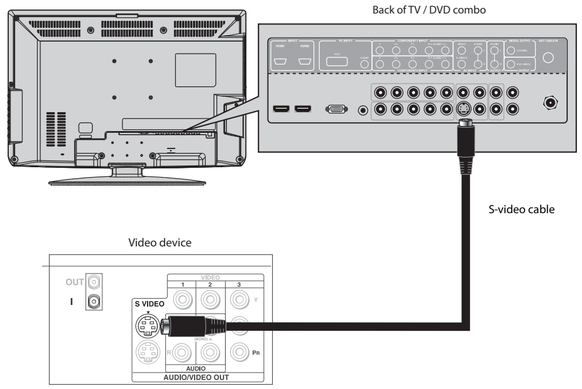

Connecting an antenna

Connect a 75 ohm cable (not included) to the ANT/CABLE IN jack on the back of the TV/DVD combo, then connect the other end of the cable to the antenna, cable TV or satellite TV box jack.

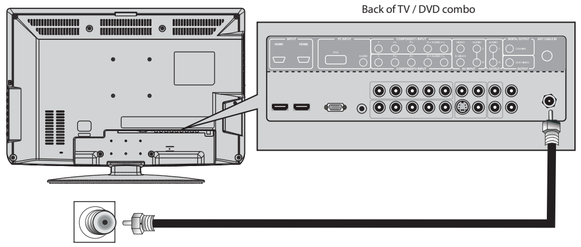

Connecting a home theater system

Using analog audio cable:

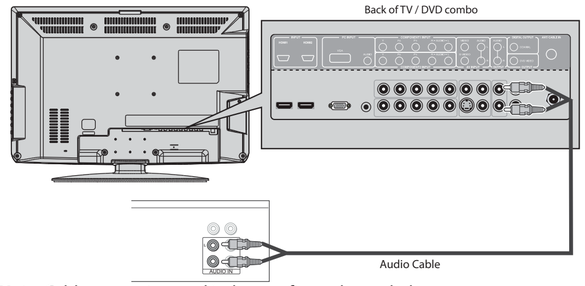

Note: Cable connectors and jacks are often color-coded.

Connecting a Computer

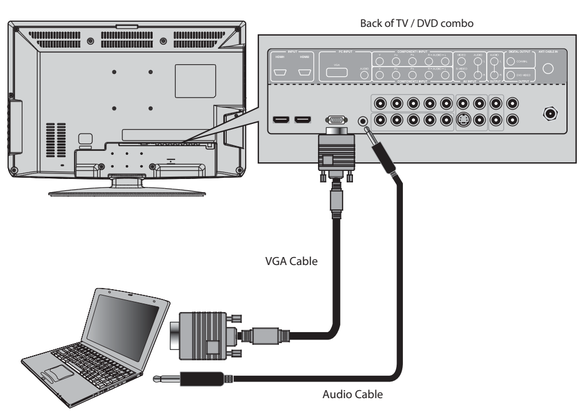

Connecting power

Connect the power cable to the AC INPUT on the back of the TV, then connect the other end to a power outlet.

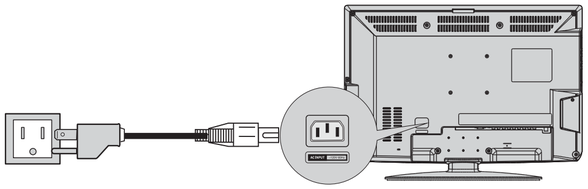

Turning on your TV for the first time

1. Plug in your TV and turn it on. The initial *Setup Wizard* opens to the Choose your menu language screen.

2. Press ▲or▼to select **English**, **French**, or **Spanish**, then press **OK/ENTER** to confirm. The Time screen opens with Mode highlighted.Press ▲ or▼ to highlight an option and press ◀ or ▶to change the setting. Options include:

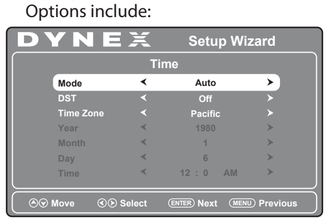

Mode-Select Custom to set date/time manually or Auto to have them set automatically.
DST-If your area uses daylight savings
Time Zone-Select your time zone
If you select **Custom**, press ▲or▼ to highlight an option, then press or ◀ to ▶ change the setting.

3 When you are done, press **OK/ENTER** to move to the next screen. The *Choose your Picture Mode* screen opens.

4 Press ▲ or▼ to highlight **Home Mode** (recommended) or **Retail Mode**. If you selected **Home Mode**, the *Choose your TV* source screen opens.

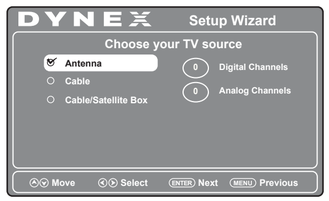

5 Press ▲ or ▼ to highlight **Antenna**, **Cable**, or **Cable/Satellite Box**, then press **OK/ENTER** . If you selected **Antenna** or **Cable**, your TV automatically scans for available channels. If you selected **Cable/Satellite Box**, auto scan is not necessary and will not appear.

6 Press **EXIT** to close the menu, then select the input source through the *INPUT SOURCE* menu.

Selecting the video input source

1 Press **INPUT**, press ▲ or ▼ to highlight a source, then press **OK/ENTER**. You can also press any of the video source buttons directly.

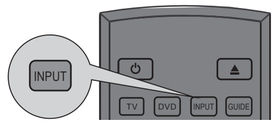

Adjusting the volume

- Press **VOL+** or **VOL-** to change the volume.
- Press **MUTE** to turn off the sound.

Selecting a channel

- To move to a different channel in the channel list, press **CH +** or **CH -** .
  OR
- Enter the channel number directly using the number buttons.

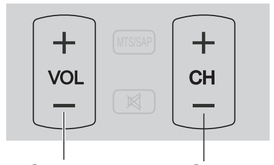

Press to change the volume.

Press to change the channel.

Viewing channel information

- Press **INFO** to show an information banner. The information banner shows current program information such as channel number and resolution
- **Digital signal information**—Displays channel number, channel label (if preset), broadcast program name, TV rating, DTV signal strength, audio information, resolution, CC mode, current time, and current program start and end times when watching a digital channel.
- **Analog signal information**—Displays channel number, channel label (if preset), audio information, and resolution when watching an analog channel.
- Press **GUIDE** to display program information in a window with live program content for the channel you are watching. Press ◀ or ▶to view information about future programs on the selected channel. Press **GUIDE** or **EXIT** to exit this feature.

On-screen menu overview

PICTURE menu

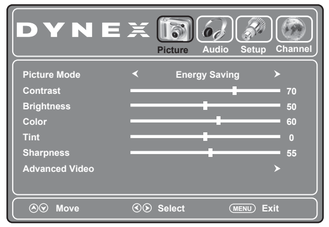

AUDIO menu

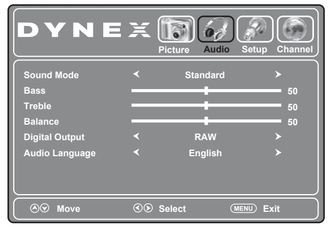

SETUP menu

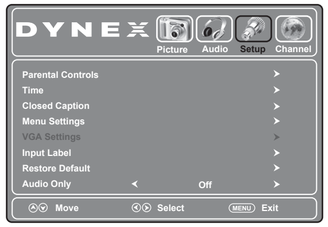

CHANNEL menu

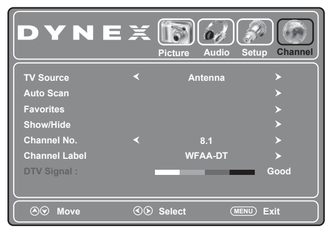

Navigating menus with your remote control

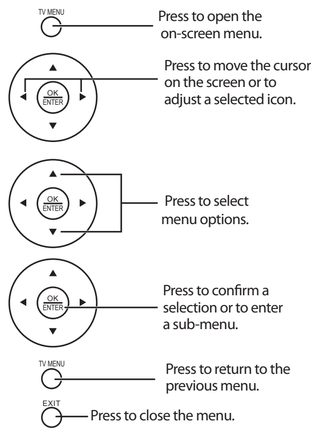
TV MENU
Press to open the on-screen menu.
OK ENTER
Press to move the cursor on the screen or to adjust a selected icon.
OK ENTER
Press to select menu options.
OK ENTER
Press to confirm a selection or to enter a sub-menu.
TV MENU
Press to return to the previous menu.
EXIT
Press to close the menu.

DYNEX™

One-year limited warranty

Visit www.dynexproducts.com for details.

Need additional help?

See your ***User Guide***! This comprehensive guide includes everything from basic how-to steps to more advanced features.

We're here for you

www.dynexproducts.com

For customer service, call:

1-800-305-2204 (U.S./Canada markets)

01 800-926-3020 (Mexico market)

Distributed by Best Buy Purchasing,LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349

RFC#BBI0802114Q2

© 2010 BBY Solutions, Inc.

All rights reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

09-1091